

HVAC Thermostat- Instructions

To raise or lower the temperature:



To make the zone cooler, slide the lever down to lower the temperature.


To make the zone warmer, slide the lever up to raise the temperature.

← Slide

To call for HVAC outside of business hours:



Your suite is programmed to have HVAC during normal business hours (Mon-Fri 7am-6pm, exclusive of Holidays).

Should you need HVAC outside of these hours, locate the thermostat in your space that is labeled "override" or "master" and press the  button one time.

This action will immediately call for 2 hours of HVAC runtime. If you need additional hours, simply press the button again at the end of your initial 2 hours.

NOTE: HVAC is currently billed at \$35/hour, with a 2-hour minimum charge.